

*Hydro***FLOW**®



*i***RANGE**

**HYDROPATH Technology** | The home of *Hydro***FLOW**®



# Electrical Specifications

**Input Voltage** 100-230V AC

**Input Frequency** 50-60 Hz

**Rated Power** 45W (15-20W Typical use)

## Material Specifications

Main unit: Anodised Aluminium

End plates: UL V-0 rated polycarbonate/ABS

## Water and Dust Protection

IP Rating: IP68 IEC 60529 (Transducer unit) IP66 IEC 60529 (Junction box)

## Safety

Europe and Worldwide:

IEC 60335-1/ EN 60335-1

USA UL60335-1

Canada: CSA-C22.2 No:60335-1

## Environmental Specifications

Operating Temperature: -20 to + 70° C (-4 to 158°F);

**Insulation** Basic insulation with the metal enclosure bonded to earth.

## Servicing

No user repairable parts are fitted. Repair must be undertaken by an authorised repair centre. If the equipment is used in a manner not specified by these instructions, the protection provided by the equipment may be impaired

## Panel Indicators

The unit is fitted with LED indicator lights. The Green LED indicates that the power is on, and the Red indicates that a signal is being transmitted.

## Electrical Connection

The user must connect the electrical supply to the junction box in accordance with the on-site ruling safety legislation at the time of installation. The power supply must be isolated, for example via an isolating switch or circuit breaker.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised.

### ***NRTL Certification and CB Test Certificate***

In accordance with the  
International (IEC) and  
NRTL standards listed  
above.




Manufactured to  
ISO 9001:2015 and ISO 14001  
To be installed in accordance with the  
latest IEE wiring instructions.  
*Fuse rating: 1A.*



To be installed in accordance with the  
latest IEE wiring instructions.  
*Fuse rating: 1A.*

# Electrical Specifications












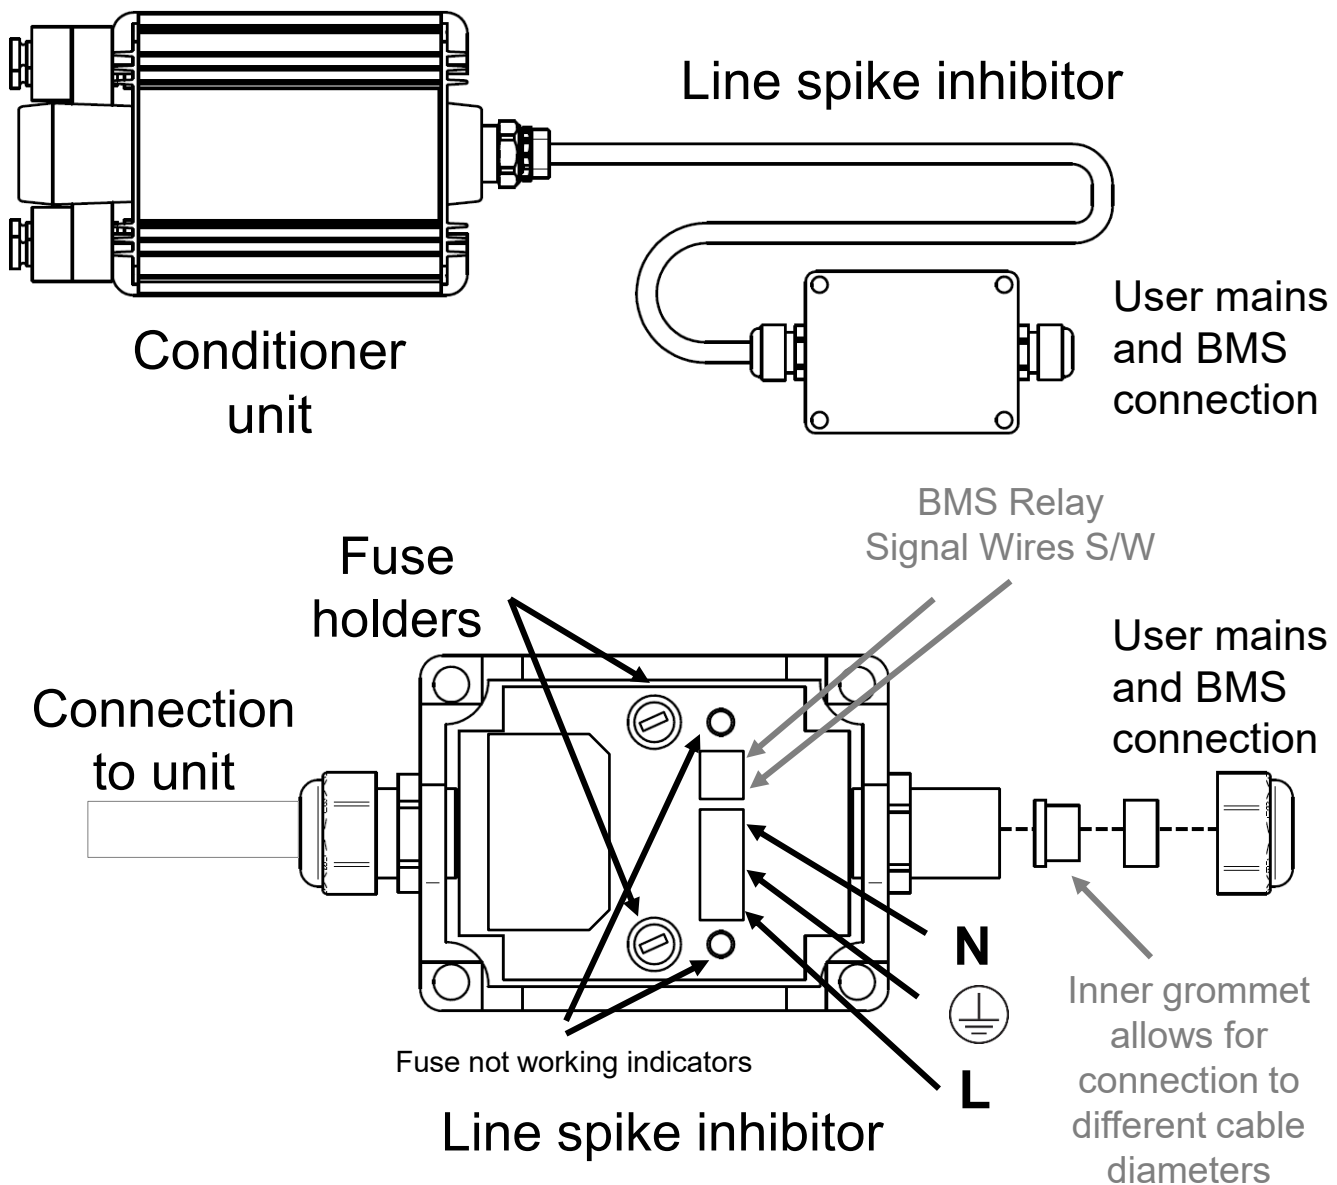


## Remote Monitoring Facility

A volt-free normally-open contact closure is provided by the unit connection with a BMS (Business Management System) computer, to monitor that the unit is operating correctly. Connection to the BMS output is made via the junction box. A suitable 5 core approved cable must be used in order to make connection to the mains input and the BMS output.

# Mechanical Details

The **HydroFLOW** i Range water conditioner is specifically designed to combat limescale in commercial and/or industrial applications by clustering mineral ions, to enhance filtration by flocculating particles and to combat biofouling. i Range units are most commonly used on heat exchangers and plumbing systems.

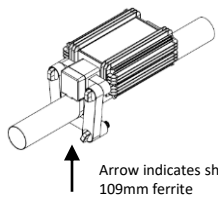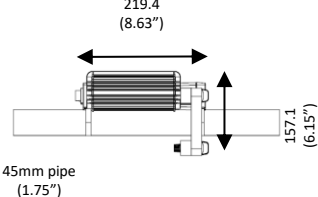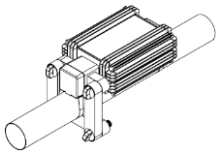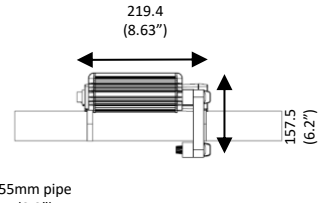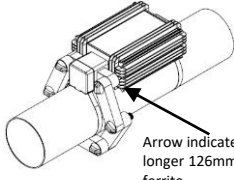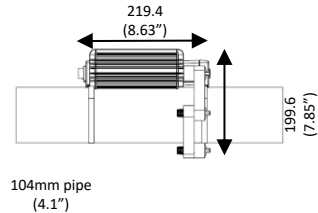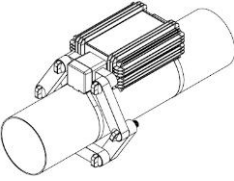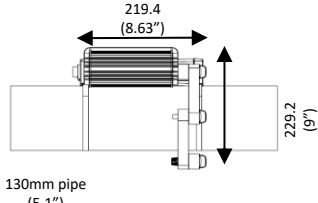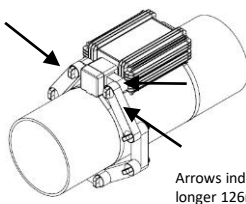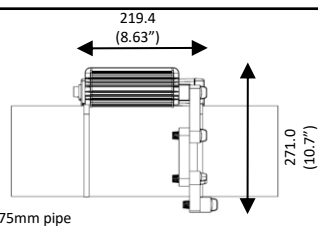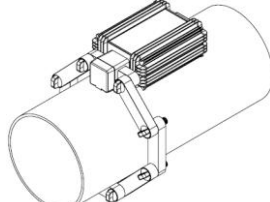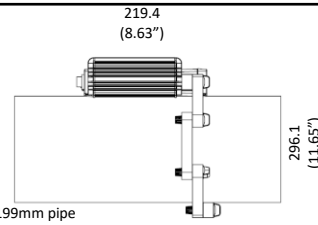Model	Ferrite Arrangement	Dimensions mm (inches)	Ferrites	Total Weight kg (lbs)
i45	 Arrow indicates shorter 109mm ferrite	 45mm pipe (1.75")	1 x 109mm (4.25") 3 x 126mm (5.0")	4.1 (8.8)
i60		 55mm pipe (2.2")	4 x 126mm (5.0")	4.2 (9.2)
i100	 Arrow indicates longer 126mm ferrite	 104mm pipe (4.1")	5 x 109mm (4.25") 1 x 126mm (5.0")	4.4 (9.7)
i130		 130mm pipe (5.1")	6 x 126mm (5.0")	4.6 (10.1)
i150	 Arrows indicate longer 126mm ferrites	 175mm pipe (6.9")	5 x 109mm (4.25") 3 x 126mm (5.0")	5.4 (11.9)
i190		 199mm pipe (7.8")	8 x 126mm (5.0")	5.8 (12.8)


- All units draw less than 1 amp of current at 110V AC
- Listed weights include: Transducer unit, power supply, ferrites, cables and mounting hardware.

# Assembly


## DO NOT POWER UP UNIT UNTIL ALL FERRITES SUPPLIED ARE CONNECTED.

POWERING THE UNITS WITHOUT FERRITES WILL INVALIDATE THE WARRANTY


- The unit is supplied with a bracket for ease of mounting to the pipe. The two upper plates should be loosely secured with bolts before installation.
- Smaller units are secured to the pipe using steel clamps and bolts

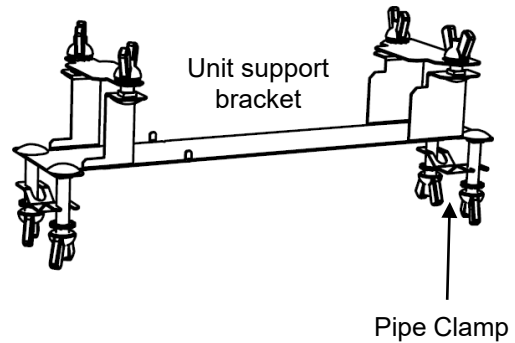

- For larger units, the brackets are supplied with stainless steel banding.
- Pass the two stainless steel bands through the slots in the bracket.

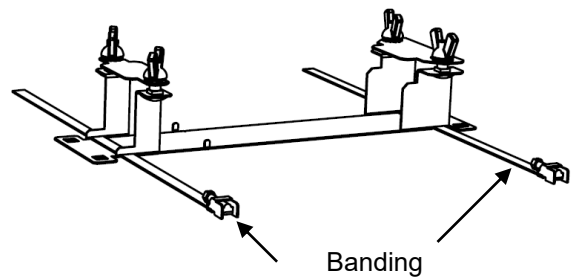

- Place the bracket on the pipe.
- If installing on a vertical pipe, place the bracket with the smaller plate upwards to ease fitting of hexagon nuts.
- Tighten steel hex nuts to secure clamps for smaller units
- Secure straps on larger units by tightening clamps with flathead screwdriver or hex socket driver

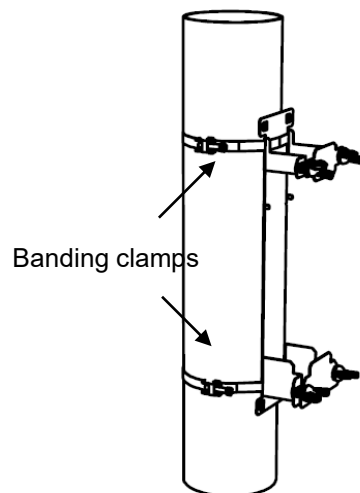

### **WARNING**


The system must be used as specified. Failure to do so will prevent correct operation of device and may impair safety.

# Assembly


## DO NOT POWER UP UNIT UNTIL ALL FERRITES SUPPLIED ARE CONNECTED.

POWERING THE UNITS WITHOUT FERRITES WILL INVALIDATE THE WARRANTY


- Place the unit on the bracket and hold in place using the swinging plates.
- Secure by tightening the four steel nuts.

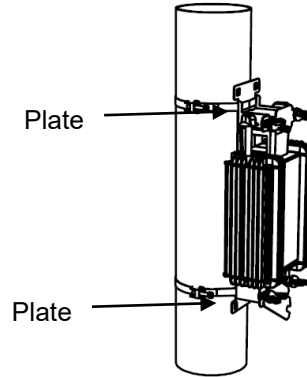

- Insert the two hexagon nuts into the holes in the end plate, next to the ferrite holding cage.
- The transducer unit is supplied with at least one **long** ferrite bar. Insert this through the holding cage until the holes line up with the hexagon nuts.

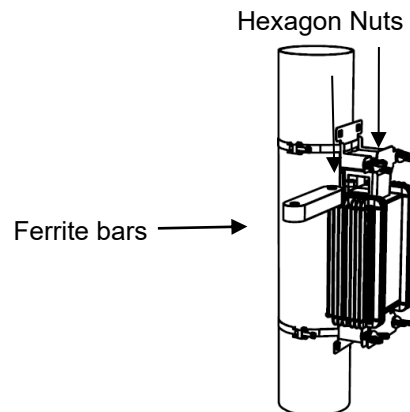

- Take a second ferrite, insert a plastic thumb screw through both ferrite bars and loosely screw into hexagon nut.
- Repeat on opposite side.

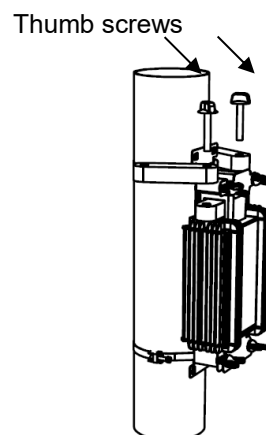

### **WARNING**


The system must be used as specified. Failure to do so will prevent correct operation of device and may impair safety.

# Assembly


## DO NOT POWER UP UNIT UNTIL ALL FERRITES SUPPLIED ARE CONNECTED.

POWERING THE UNITS WITHOUT FERRITES WILL INVALIDATE THE WARRANTY


- Assemble **all** the other ferrites around the pipe according to the mechanical configuration specified for the unit.
- Loosely secure each ferrite with plastic thumb screws and thumb nuts.

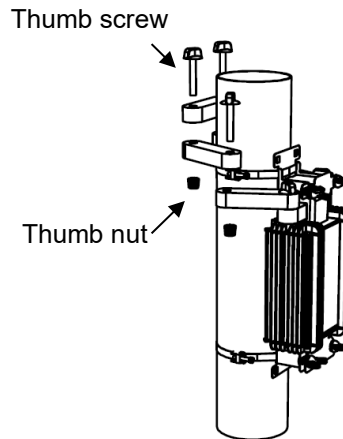

- Once the ferrite ring is complete, tighten all wing nuts until hand tight.
- **Do not over tighten as ferrites are fragile.**

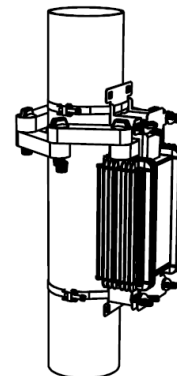

- In accordance with local code and regulations, connect the junction box to the electrical power supply (100V-230V AC).
- Energise the electrical power supply and ensure that the Red and Green LED lights on the unit are glowing brightly.

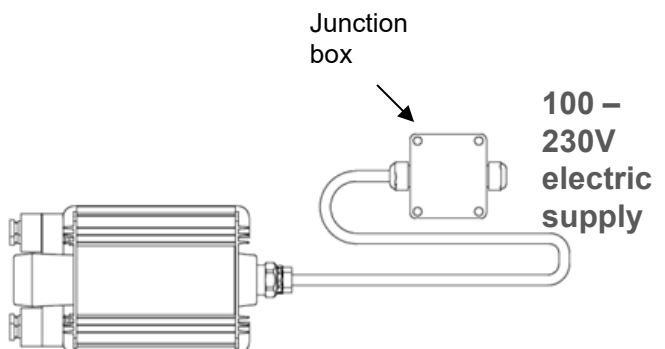

### **WARNING**

The system must be used as specified. Failure to do so will prevent correct operation of device and may impair safety.



# Location Criteria


The i Range unit can provide a range of benefits, including protection against limescale, treatment of biofouling and flocculation of particles. The most effective location for the unit depends on the result desired.

- For protection against Limescale due to heating, the unit should be fitted on the cold feed to where the water is heated.
- For protection against limescale, the unit should be fitted after any pumps or filters as these can degrade the conditioning effect.
- To enhance flocculation, the ideal location is before the pump feeding a filter.


## Electrical Loops

The unit operates by creating a potential difference on the pipe on either side of the ferrite ring. An electrical loop is created whenever an electrical connection is made from one side of the ferrite loop to the other, e.g. by metal supports, wiring or pipework. A loop will prevent the unit from operating correctly.


This problem can be solved by moving the unit outside the electrical loop. If this is not possible, the metal support brackets can be electrically insulated. Installing the unit on a section of plastic pipe eliminates the possibility of an electrical loop.

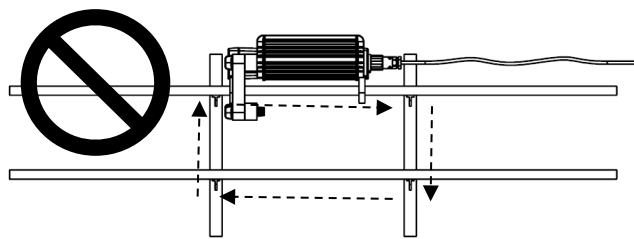


Brackets create loop

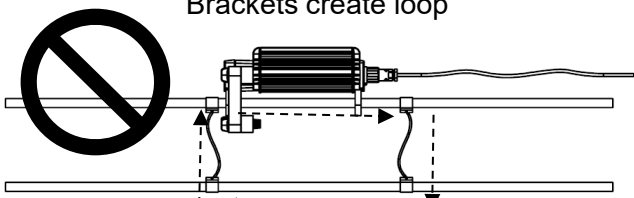

Wiring creates loop

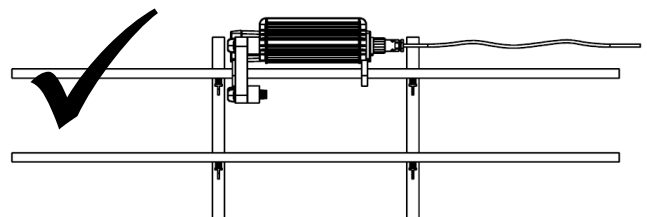

Electrically insulate brackets

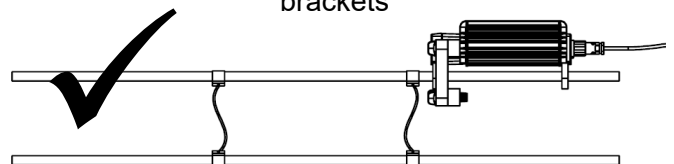

Move unit out of loop

If you are unsure of any details of fitting or installation, please contact your local Hydropath representative for technical support.

## Box Contents

Transducer Unit

Instructions

Model	Long ferrites	Short Ferrites	Plastic Hex Nuts	Plastic Thumb Screws	Plastic Thumb Nuts	Steel Bracket	Steel Bands	Pipe clamps	50mm bolts	Addl. washers and wing nuts
<b>i45</b>	<b>3</b>	<b>1</b>	<b>2</b>	<b>4</b>	<b>2</b>	<b>1</b>	<b>0</b>	<b>2</b>	<b>4</b>	<b>4</b>
<b>i60</b>	<b>4</b>	<b>0</b>	<b>2</b>	<b>4</b>	<b>2</b>	<b>1</b>	<b>2</b>	<b>0</b>	<b>0</b>	<b>0</b>
<b>i100</b>	<b>1</b>	<b>5</b>	<b>2</b>	<b>6</b>	<b>4</b>	<b>1</b>	<b>2</b>	<b>0</b>	<b>0</b>	<b>0</b>
<b>i130</b>	<b>6</b>	<b>0</b>	<b>2</b>	<b>6</b>	<b>4</b>	<b>1</b>	<b>2</b>	<b>0</b>	<b>0</b>	<b>0</b>
<b>i150</b>	<b>3</b>	<b>5</b>	<b>2</b>	<b>8</b>	<b>6</b>	<b>1</b>	<b>2</b>	<b>0</b>	<b>0</b>	<b>0</b>
<b>i190</b>	<b>8</b>	<b>0</b>	<b>2</b>	<b>8</b>	<b>6</b>	<b>1</b>	<b>2</b>	<b>0</b>	<b>0</b>	<b>0</b>

# HYDROPATH

The home of *HydroFLOW*®

To register the product please visit  
[hydropath.com/product-registration/](http://hydropath.com/product-registration/)  
 Products must be registered to activate any  
 warrantee or guarantee. All goods are sold subject  
 to our standard terms and conditions of sales,  
 copies of which are available upon request.

